

	9 volt block Alkaline			2x 1.5 volt AAA Alkaline		4x 1.5 volt AA Alkaline
Remote		Symax Remote	Faber Remote		receiver	

Batteries

To be able to start the fireplace, the receiver and the remote run on batteries.

Complaints:

When the batteries in the receiver and / or the remote are nearly empty, the fire will have the following symptoms:

- Ignition works but there is no pilot flame;
- Pilot ignites, but goes within 2 sec. from
- Remote has pore range with the receiver
- Tempered temperature in the remote is not correct
- Display is no longer clearly readable

Result: Pilot will not turn on.

Beeps:

To inform you as a user when the batteries in the receiver are (almost) empty, the receiver gives a number of extra beeps after the start command. When the batteries in the remote are empty, this will be indicated in the display by the battery symbol is indicated.

The Faber remote has LED display lights instead of a display. When the LED is not active, this indicates that the batteries in the hand transmitter are empty.

By replacing the batteries in the receiver and in the remote every year for new, fully charged batteries, you ensure that your fireplace will start without problems for a season.

Furthermore, the system automatically switches off the pilot flame by:

- Timer function
- On-Demand pilot (switching off the pilot after 5 days)

The system automatically turns off the pilot when your fireplace has been inactive for a long time.

Replace batteries

Receiver:

The receiver is in most cases mounted behind a service door, under or next to the fire.

- Carefully move the receiver through the service door.
- Slide the receiver cover open forwards
- Assemble 4 pieces of 1.5 volt AA batteries, pay attention to the correct position of the batteries and that the red ribbon is under the batteries.
- Mount the cover and carefully slide the receiver back behind the service door.

Remote

- Slide open the cover of remote and install 2 1.5-volt AAA batteries (or 9-volt block)
- Pay attention to the correct position.
- Slide the cover back into place.



Your fireplace can now be started again.