



Installation manual “installing top light afterwards”

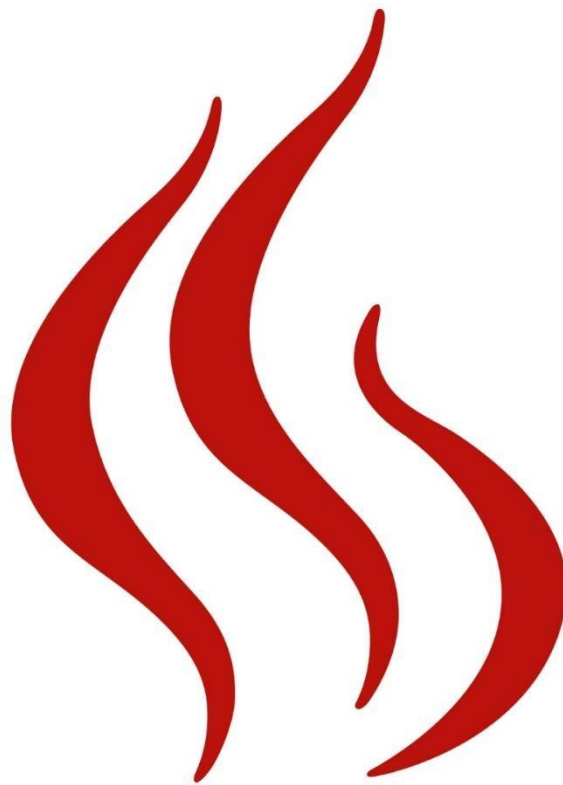

20901582 (e-Matrix linear 1050/400)
20901584 (e-Matrix linear 1300/400)

40012198-2302



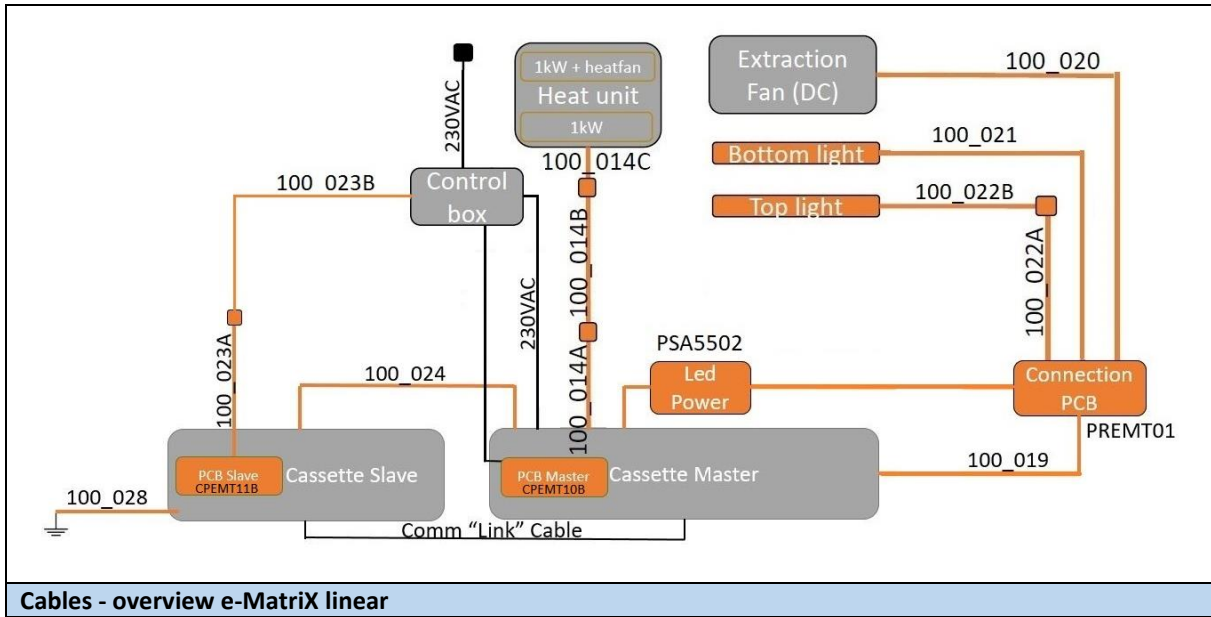

Cables - overview e-Matrix linear

Attention! *If top lighting is going to be installed also in addition to bottom lighting or top lighting is installed already, first in the settings of the App activate the bottom lighting and (fireplace) type and then (de)activate the top lighting!*

Installing top light at the fan/heater unit



1. Fan/heater unit + top light.




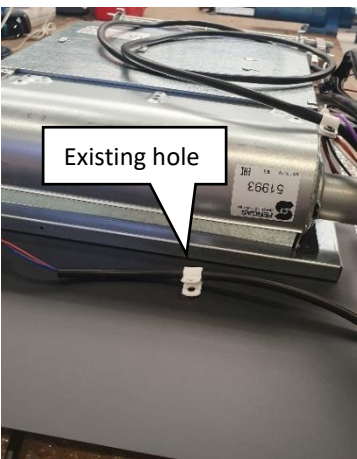




2a. Insert the connection cable through the hole....




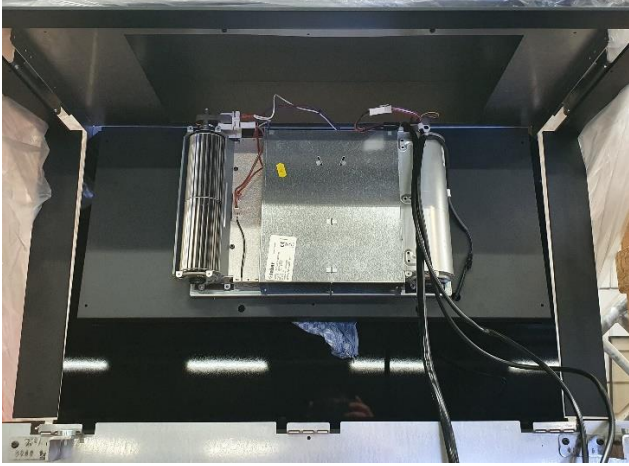






2b. ... and fix the LED support with supplied screws.




3. Place the unit upside-down.

		
<p>4. Connect the supplied top light extension cable (no: 100_022A) with the top light connection cable (no: 100_022B).</p> <p>5. Fix the supplied cable clamp around the top light extension cable and fix it (with a supplied screw) by using the existing hole on the right. Make sure there is no tension on the cable!</p>		
		
<p>6. Also fix the top light extension cable with the supplied tie wrap.</p>		<p>7. Ready for installing in the e-Matrix again.</p>



Reinstalling the fan/heater unit		
		
<p>1a. e-Matrix linear.</p>	<p>1b. A recess into which the fan/heater unit can be hung.</p>	<p>1c. The part of the fan/heater unit that needs to be hung in the recess.</p>
		
<p>1d. Protect the internal back panel for damage, for example by using a towel.</p>	<p>2a. Lead the extraction fan-, the heat fan- and top light cable through the back of the e-Matrix to the Engine.</p>	
	 <p>2c. Where the cables should come out.</p>	
<p>2b. Make sure the cables are running as shown in the picture.</p>	 <p>3a. Lift up the fan unit....</p>	<p>3b. and reattach the screws.</p>





4a. Connect the heat fan cable with the Engine (cable no: 100_014A_02 and 100_014B_02).

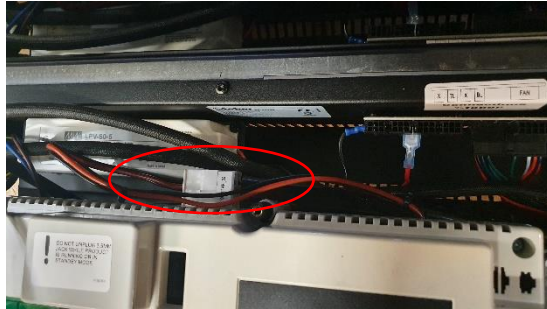

4b. Put the cable behind the Engine near the LED power supply.

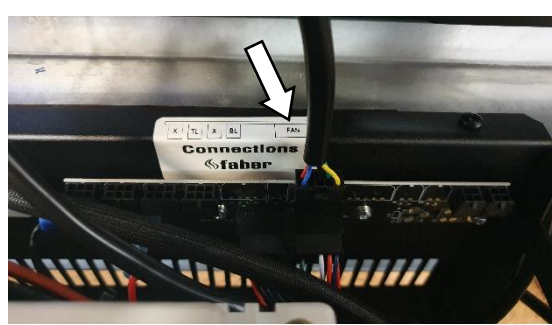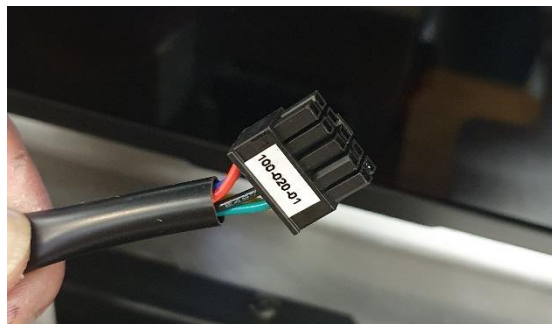


5. Connect the extractor fan cable (no: 100_020_01) into the “FAN” connector of the connection PCB.

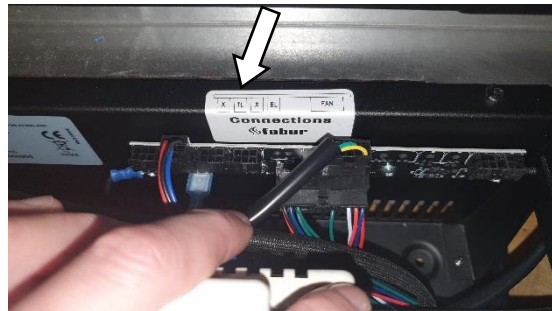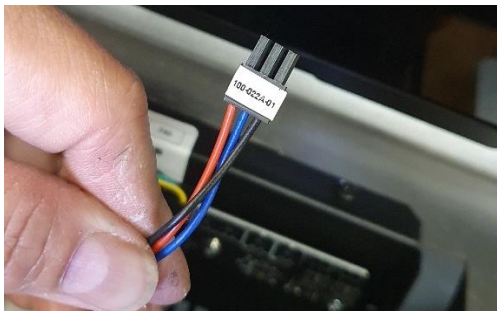

6. Connect the top light cable (no: 100_022A_01) into the “TL” connector of the connection PCB.

Attention! *If top lighting is going to be installed also in addition to bottom lighting or top lighting is installed already, first in the settings of the App activate the bottom lighting and (fireplace) type and then (de)activate the top lighting!*

Once the top light is connected, in the App settings you need to make it known that top lighting is connected (Make sure you are connected to the fireplace with the App):

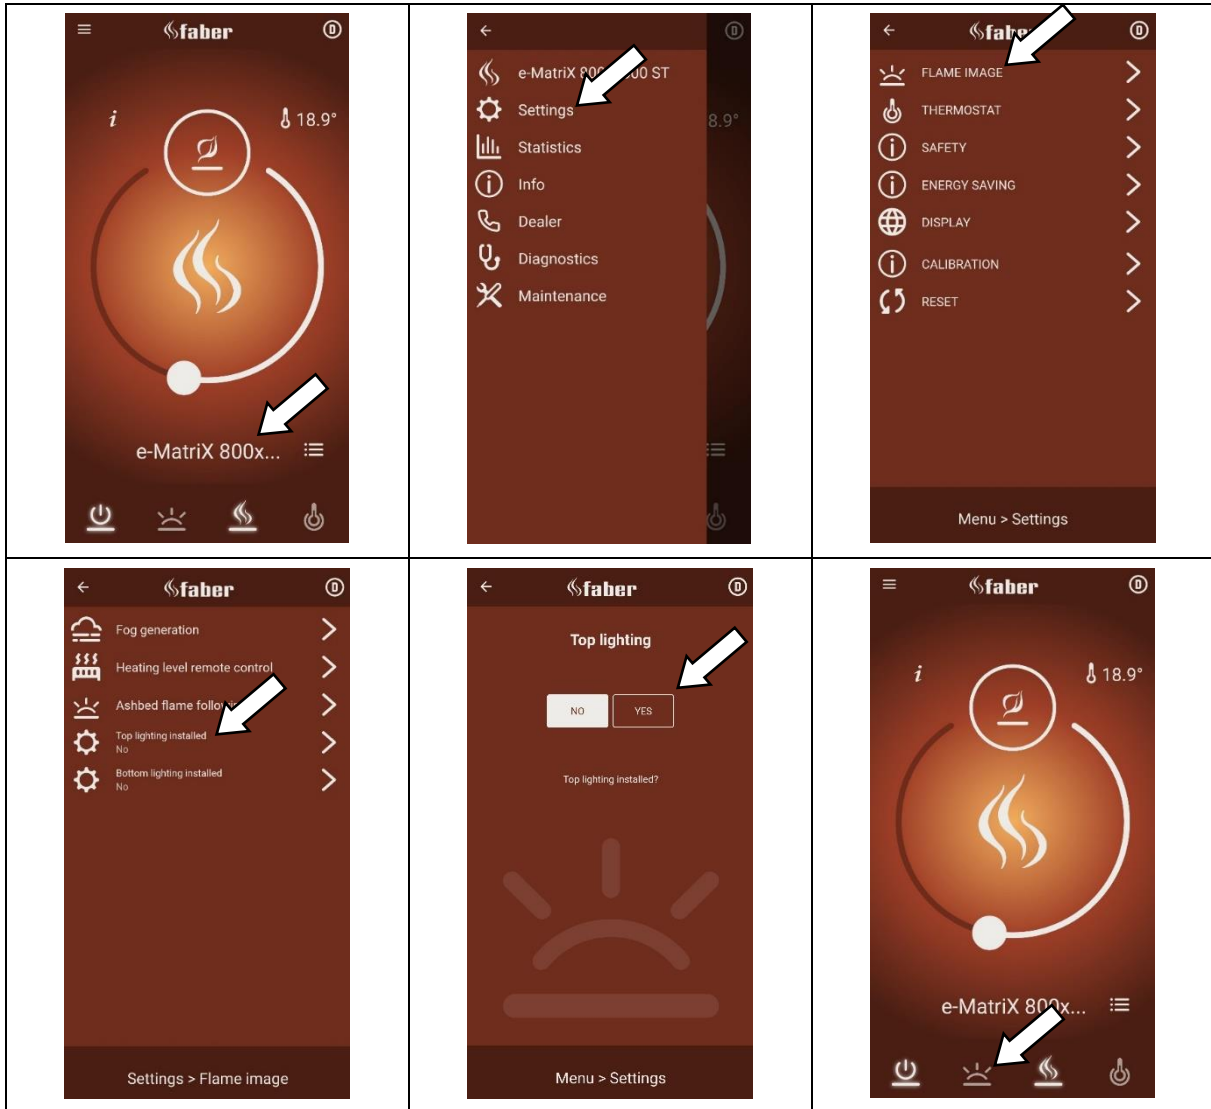



www.faberfires.com

Saturnus 8

Postbus 219

contact@faberfires.com

NL 8448 CC Heerenveen

NL 8440 AE Heerenveen