

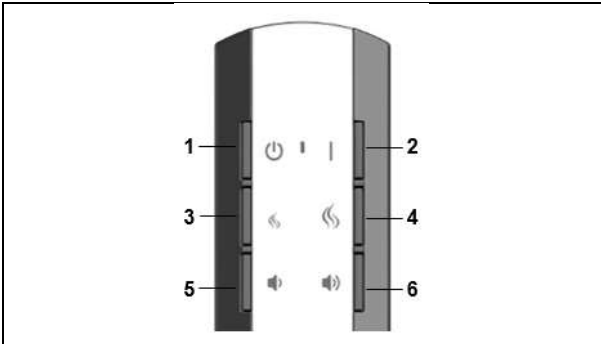
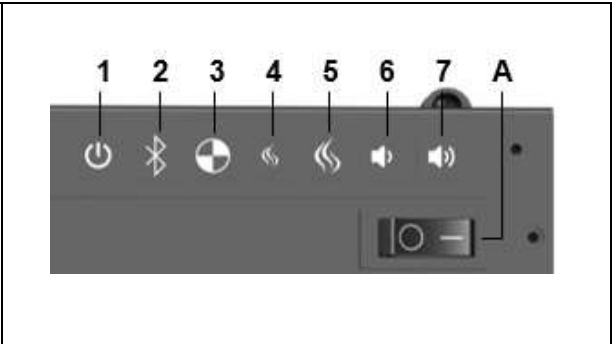
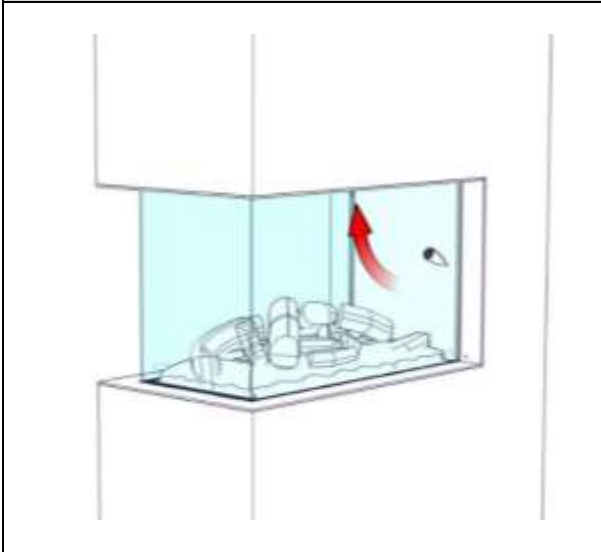
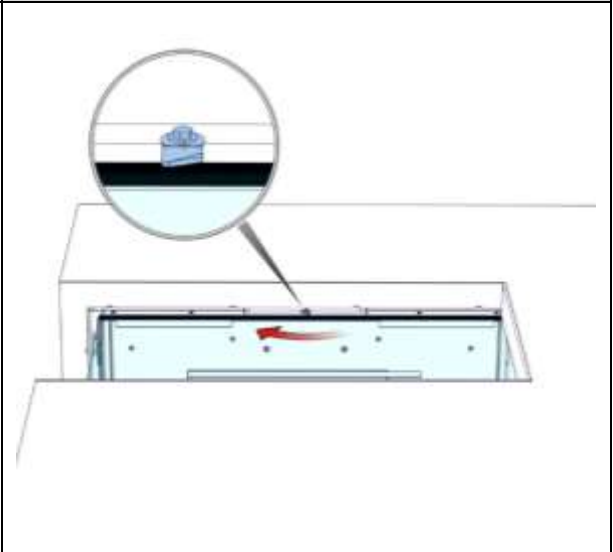
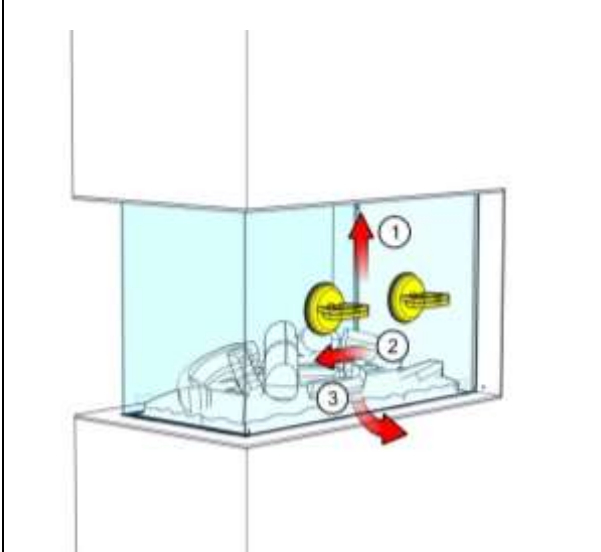
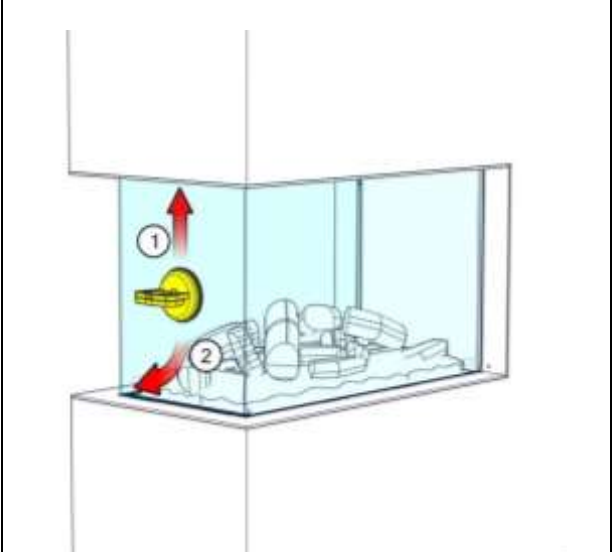


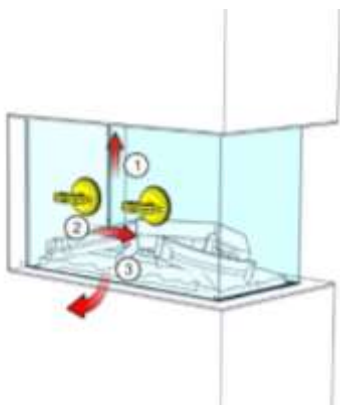
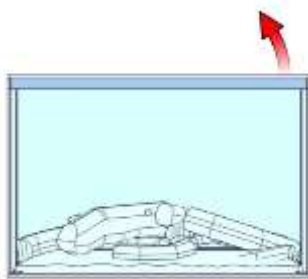
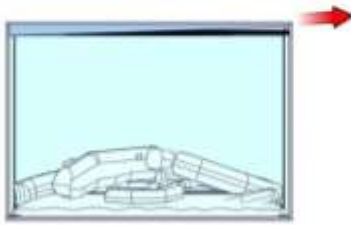
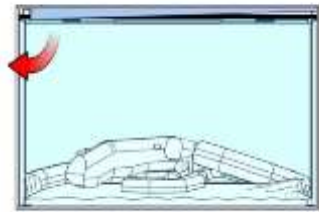
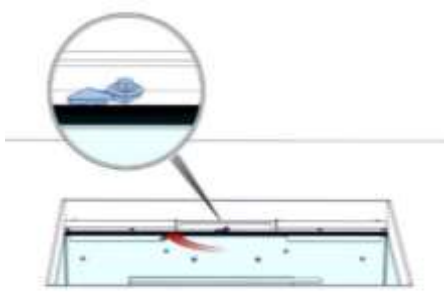
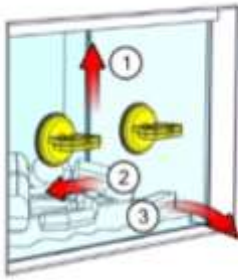
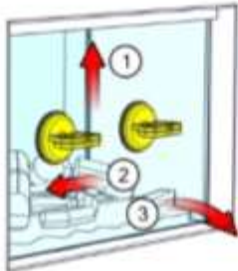
Quick reference

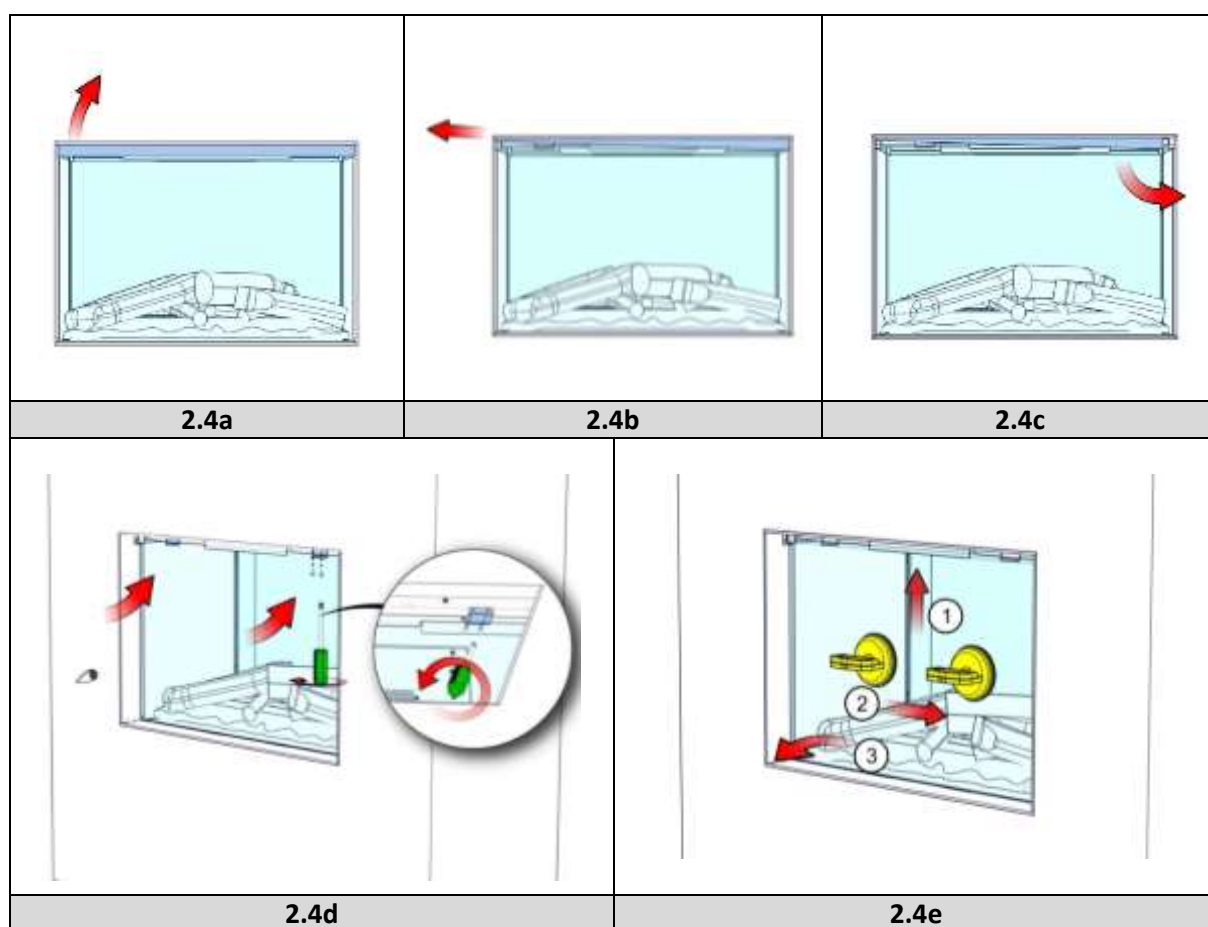
e-MatriX 800-RD/ST (LL)



This quick reference is intended for the following electric fires:		
- e-Matrix 800x500-RD (LL) - e-Matrix 800x500-ST (LL)		

	
1.0	1.1
	
2.0a	2.0b
	
2.0c	2.1

		
2.2		
		
2.3a	2.3b	2.3c
		
2.3d	2.3e	
		
2.3f		



1. Geachte gebruiker

Lees voordat u de haard in gebruik neemt eerst de handleiding voor veiligheid- en installatie instructies.

2. Bediening

Afstandsbediening (zie fig. 1.0)

- 1 = haard uit
- 2 = haard Aan (1x drukken)/alleen gloei effect (2x drukken)
- 3 = vlam lager
- 4 = vlam hoger
- 5 = volume lager
- 6 = volume hoger

Handmatige bediening (achter service deurtje) (zie fig. 1.1)

- A = hoofdschakelaar
- 1 = haard Aan/Uit
- 2 = koppelen afstandsbediening
- 3 = niet gebruiken, alleen voor service doeleinden
- 4 = vlam lager
- 5 = vlam hoger
- 6 = volume lager
- 7 = volume hoger

3. Reinigen glas

!! Schakel het toestel uit alvorens het glas te reinigen.

Afhankelijk van de waterkwaliteit en gebruiksduur kan er aanslag op het glas ontstaan.

4 Glas uitnemen

4.1 Frontglazen e-MatriX-RD

4.1.1 Frontglas (zie fig. 1.1a, verleen service via deze kant)

- Draai de glasklem met de klok mee. Zie fig. 2.0a en 2.0b.
- Plaats de zuignappen en verwijder het glas. Zie fig. 2.0c.

4.1.2 Tweede frontglas

Voor het reinigen van het glas is het niet nodig deze te verwijderen.

- Plaats de zuignappen en verwijder het glas. Zie fig. 2.2.

4.2 Frontglazen e-MatriX-ST

4.2.1 Frontglas (zie fig. 1.1b, verleen service via deze kant)

- Verwijder de afdekstrip bovenin. Zie fig. 2.3a, b en c.
- Draai de glasklem met de klok mee. Zie fig. 2.3d en 2.3e.
- Plaats de zuignappen en verwijder het glas. Zie fig. 2.3f.

4.2.2 Tweede frontglas

Voor het reinigen van het zijglas is het niet nodig deze te verwijderen.

- Verwijder de afdekstrip bovenin. Zie fig. 2.4a, b en c.
- Verwijder beide glasveren bovenin. Zie fig. 2.4d.
- Plaats de zuignappen en verwijder het glas. Zie fig. 2.4e.

Het terugplaatsen van het glas gaat in omgekeerde volgorde.

4.3 Zijglas e-MatriX-RD

Voor het reinigen van het zijglas is het niet nodig deze te verwijderen.

- Plaats een zuignap en verwijder het zijglas. Zie fig. 2.1.

Het terugplaatsen van het glas gaat in omgekeerde volgorde.

5 Onderhoudsfrequentie

- Voor professioneel gebruik 1x per 3 maand.
- Voor huishoudelijk gebruik 1x per jaar.

Voor meer informatie zie de handleiding.

1. Dear user

For safety instructions, installation and first use read the manual.

2. Using the fire

Remote control (see fig. 1.0)

- 1 = OFF
- 2 = press once for ON / press twice for glow effect only
- 3 = reduce flame
- 4 = increase flame
- 5 = reduce fire crackling sound
- 6 = increase fire crackling sound

Manual control (behind access door)

See fig. 1.1

- A = main switch
- 1 = ON/OFF
- 2 = pairing
- 3 = only for maintenance (service engineer)
- 4 = reduce flame
- 5 = increase flame
- 6 = reduce fire crackling sound
- 7 = increase fire crackling sound

3. Glass cleaning

!! Switch off the appliance before cleaning the glass.

Depending on the water quality and time of use staining will occur on the glass.

4. Removing glass

4.1 Front glasses e-MatriX-RD

4.1.1. Front glass (see fig. 1.1a, provide service from this side)

- Rotate the glass clamp clockwise. See fig. 2.0a and 2.0b.
- Place the suction cups and remove the glass. See fig. 2.0c.

4.1.2. Second front glass

For cleaning only it's not necessary to remove this glass.

- Place the suction cups and remove the glass. See fig. 2.2.

For replacing the front glass repeat the steps in reverse order.

4.2 Front glasses e-MatriX-ST

4.2.1 Front glass (see fig. 1.1b, provide service from this side)

- Remove the cover strip. See fig. 2.3a, b and c.
- Rotate the glass clamp clockwise. See fig. 2.3d and 2.3e.
Place the suction cups and remove the glass. See fig. 2.3f.

4.2.2 Second front glass

For cleaning only it's not necessary to remove this glass.

- Remove the cover strip. See fig. 2.4a, b and c.
- Remove both glass springs at the top. See fig. 2.4d.
- Place the suction cups and remove the glass. See fig. 2.4e.

For replacing the front glass repeat the steps in reverse order.

4.3 Side glass e-MatriX-RD

For cleaning only it's not necessary to remove this glass.

- Place the suction cups and remove the glass. See. 2.1.

For replacing the front glass repeat the steps in reverse order.

5 Maintenance frequency

- For commercial use once every three months.
- For domestic use once a year.

For further information see manual.



www.faber.nl - info@faber.nl

Saturnus 8 NL - 8448 CC Heerenveen

Postbus 219 NL - 8440 AE Heerenveen

T. +31(0)513 656500

F. +31(0)513 656501