Installation manual "installing (optional) bottom light afterwards"
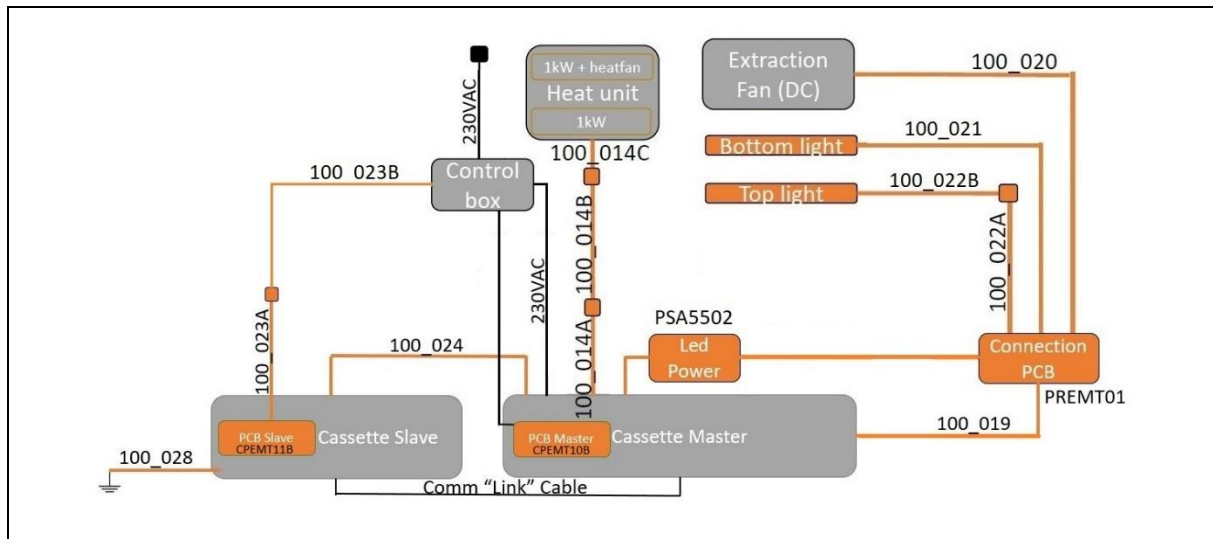

20901583 (e-MatriX linear)
20901626 (e-MatriX mood)
20901629 (e-MatriX 800/1600 ST)
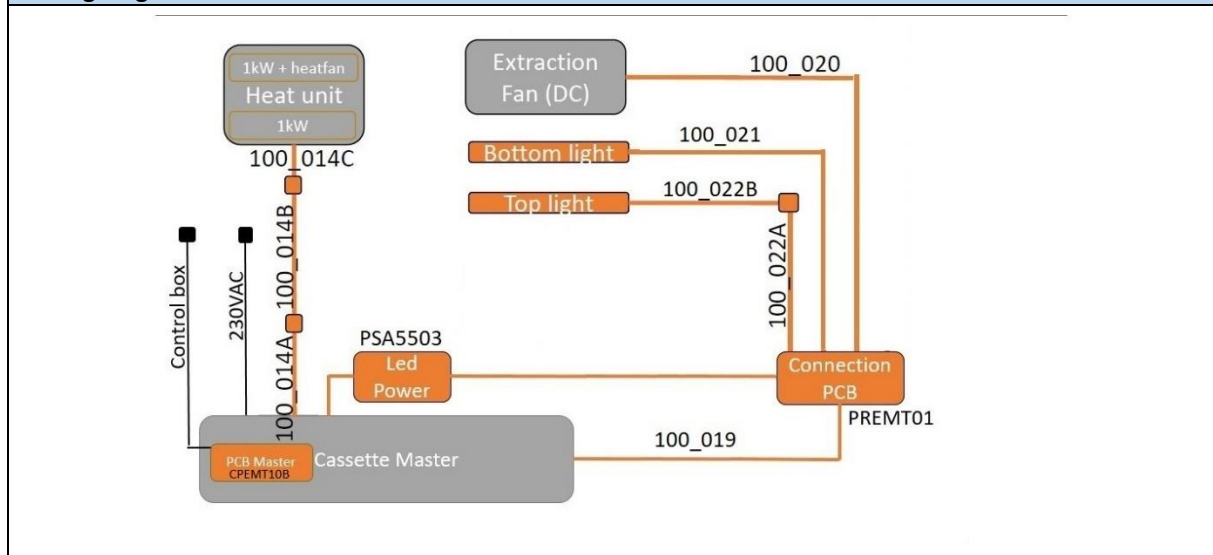
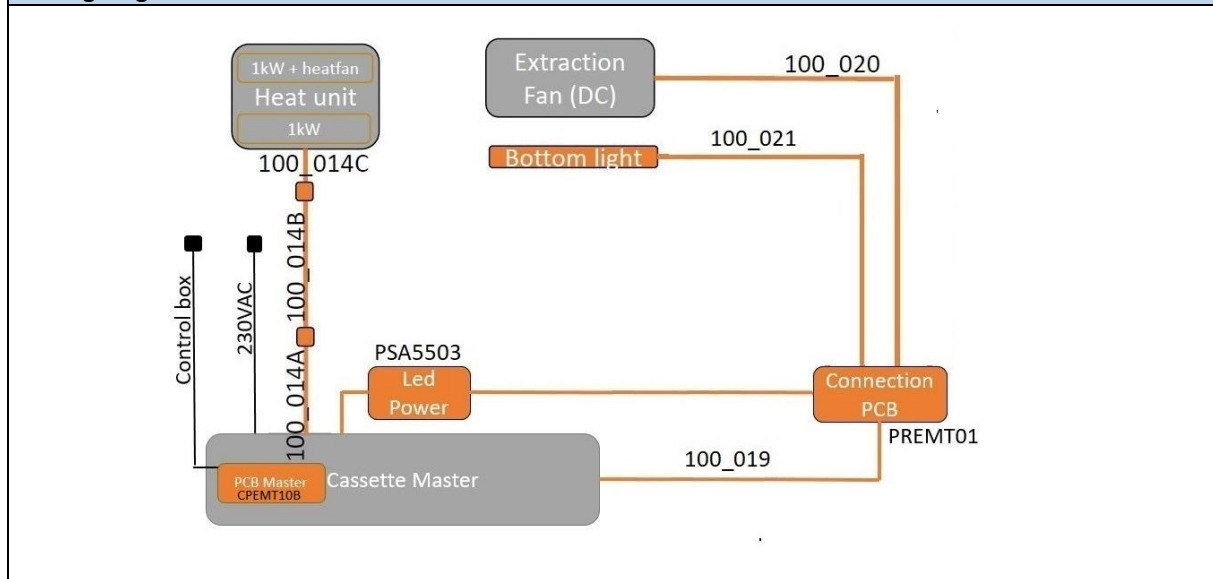## Wiring diagram e-MatriX linear-serie

230VAC

1kW + heatfan
Heat unit
1kW

Extraction Fan (DC) — 100_020

Control box

100_023B

Bottom light — 100_021

Top light — 100_022B

100_014C

100_023A

230VAC

100_014B

100_022A

100_024

100_014A

PSA5502
Led Power

Connection PCB

PREMT01

PCB Slave CPEMT11B — Cassette Slave

PCB Master CPEMT10B — Cassette Master

100_019

100_028

Comm "Link" Cable

Wiring diagram e-MatriX linear-serie

Wiring diagram e-MatriX mood-serie

1kW + heatfan
Heat unit
1kW

Extraction Fan (DC) — 100_020

Bottom light — 100_021

Top light — 100_022B

100_014C

Control box

230VAC

100_014B

100_022A

100_014A

PSA5503
Led Power

Connection PCB

PREMT01

PCB Master CPEMT10B — Cassette Master

100_019

Wiring diagram e-MatriX mood-serie

Wiring diagram e-MatriX 800/1600 ST

1kW + heatfan
Heat unit
1kW

Extraction Fan (DC) — 100_020

Bottom light — 100_021

100_014C

Control box

230VAC

100_014B

100_014A

PSA5503
Led Power

Connection PCB

PREMT01

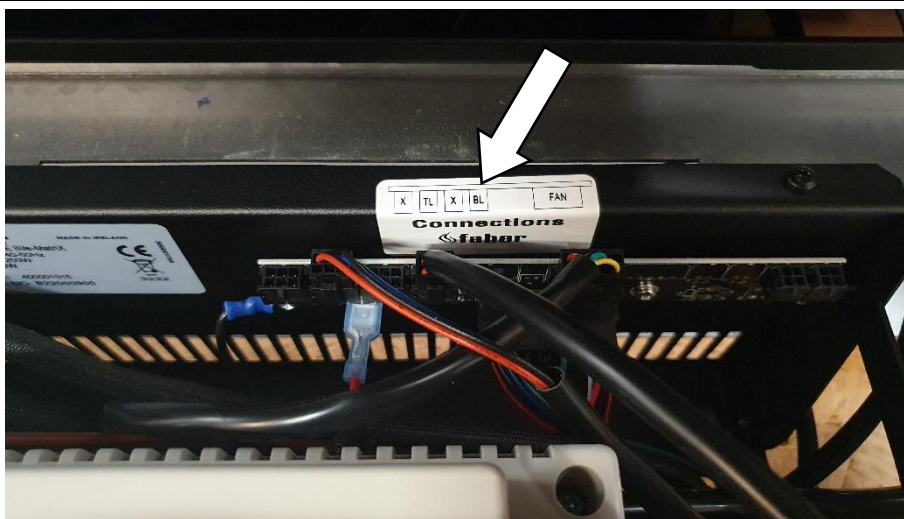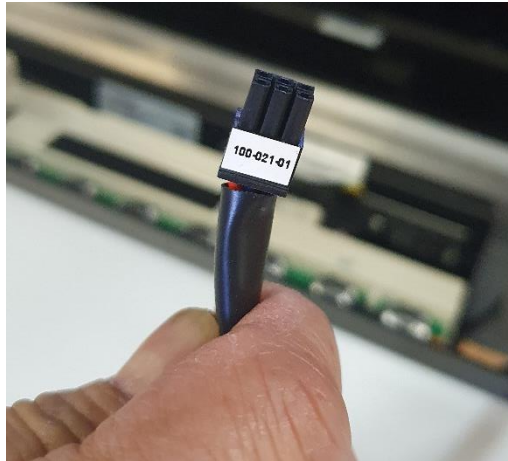PCB Master CPEMT10B — Cassette Master

100_019

Wiring diagram e-MatriX 800/1600 ST

§ faber

Remove the decoration set and the existing bottom plate without LED.

Let the LED bottom plate rest carefully at the front of the fire.

Insert the connection cable into the "BL" connector of the terminal block.

Carefully place the bottom plate. <u>(Check that the cable will not block the outflow opening (fire opening) of the Engine).</u>

Attention! *If top lighting is going to be installed also in addition to bottom lighting or top lighting is installed already, first in the settings of the App activate the bottom lighting and (fireplace) type and then (de)activate the top lighting!*

Once the bottom light is connected, in the App settings you need to make it known that bottom lighting is connected and for which (fireplace) type that is (Make sure you are connected to the fireplace with the App):